

# A

***FreeSpirit™***



 
**Numeric Display Pager  
Operating Instructions  
68P81016B05-0**

Congratulations! You have just purchased a *FreeSpirit™* pager by Motorola, world leader in paging products. All of the *FreeSpirit* pager's functions are activated through the use of just *one* button—making it the very easiest pager to operate.


### ***Getting the Most Out Of Your FreeSpirit Pager:***

- Give your pager number to friends and family. When they call your pager number, they enter the number where they can be reached on a touch tone key pad. This number is then displayed on the screen of your *FreeSpirit* pager when you receive the page. You can then call them back, allowing you to be in touch wherever you go.
- Include your pager number on your telephone answering machine message. Then you can receive important messages immediately—without calling in to your answering machine.
- Leave your pager number at your children's school and with the babysitter so you can always be reached, right away, in an emergency.
- Establish "code" messages with your family or friends. For example, your children can page you with the code 3333 to tell you they got home from school, or 2222 means they went to their friends' house. Be creative!
- If you have a cellular phone, give out your pager number instead of your cellular number. Then you can decide who to call back on your cellular phone, without paying for incoming cellular calls. This can drastically reduce your monthly cellular bill!

## CONTROLS

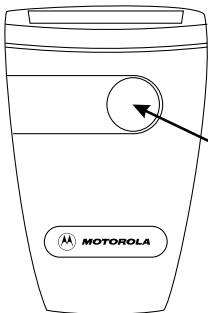

One-Button  
Operation

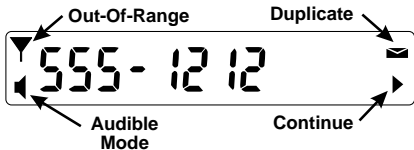 

Out-Of-Range

Duplicate

555-1212

Audible  
Mode

Continue

## **Turn the Pager ON:**

Press the button and release. Dashes appear on the display (-----), indicating the pager is on and ready to receive messages.

## ***Turn the Pager OFF:***

Press and Hold the button to scroll through the pager settings. When the prompt “off” appears in the display, release the button.

**CAUTION:** All previously received pages are automatically erased when the pager is turned off.

## ***Change Pager Alert Setting: (Silent/Audible)***

- Press and Hold the button to scroll through the pager settings. (silent, audible, off?).
- Release the button when the desired pager setting appears on the display.

**NOTE:** When in Audible mode, the pager emits a “beep” tone when a page is received. Audible mode is indicated in the pager display as a speaker symbol (S). When in Silent mode, the pager vibrates to notify that a page has been received and the speaker symbol (S) disappears from the display. This is used in situations where an audible sound might disturb others.

**Pager Etiquette Tip:** Put your *FreeSpirit* pager in Silent mode when you are in meetings, church, or the theater to avoid disturbing others with the alert tone. The silent vibrate feature is also handy if you are at a loud concert, or other noisy environment where it is difficult to hear the audible tone.

### ***Receiving and Reading Messages:***

- When a page is received, the pager alerts for 8 seconds.
- Press the Button and release to stop the alert.
- Press the Button and release again to display the message.
- Messages containing more than 12 characters continue on a second screen. This is indicated by a continuation arrow (N) in the lower right corner of the display.
- The second screen appears automatically after 8 seconds or by pressing the button before the screen times out.
- If the message is left unread, the pager emits a reminder alert every 2 minutes.
- The number of unread messages appear on the display (ie. 1 page)
- Up to ten 20-character messages can be stored in the pager. To read other messages, continue pressing the button to scroll through messages.

### ***Other Pager Features:***

- **Clearing Messages:** Messages are automatically cleared when the pager is turned off.
- "ouerfl o@j" appears when the number of unread messages received is greater than the available memory. When this occurs, new pages received will "bump" the first page out of memory. After you have read all of your unread messages, the standby screen (-----) reappears.

- When the same message is received more than once, the duplicate message symbol (Y) appears in the upper right corner of the display to indicate that a duplicate message was received.
- When a page is received without numeric data, “t1 one onl y” appears on the display screen.
- If your pager is equipped with the “Out of Range” feature, *and* if you are outside the coverage area of your paging transmitter, the “O” symbol appears in the upper left corner of the display to inform you that you are out of range. As long as the out of range symbol is displayed, you will be unable to receive any pages.



*Opening the battery cover.*

**Batteries:**

2 AAA batteries are required for operation.

Turn pager OFF when not in use to conserve batteries. Batteries should last approximately 850 to 950 hours of continuous use.

A low battery alert and warning display (10@j cell) occurs approximately one week before the batteries reach the end of their life.

**To change Batteries:** Firmly slide the battery door off the back of the pager, pushing with two thumbs, as shown above. Replace both batteries, (2 AAA), matching polarity (+ -) to the diagram inside the battery door. Slide the battery door back into position.

## **REPAIR AND MAINTENANCE**

Your *FreeSpirit* pager, properly handled, is capable of many years of trouble-free service. However, should it ever require service, Motorola's National Service Organization, staffed with specially trained technicians, offers conveniently located repair and maintenance facilities throughout the country.

t and Motorola are registered trademarks of Motorola, Inc.

FreeSpirit is a trademark of Motorola, Inc.

© 1992, 1993 by Motorola, Inc., Paging Products Group, 1500  
NW 22nd Avenue, Boynton Beach, FL 33426-8292 U.S.A.

Printed in U.S.A. 7/93

